WARNINGS:

- 1. RFAD & ADHERE TO ALL INSTRUCTIONS AND WARNINGS BEFORE USING ANY ACTIONHEAT™ HEATED PRODUCTS.
- 2. USE CAREFULLY, HEATED INSOLES CAN GET VERY HOT. DO NOT USE WHILE SLEEPING OR UNCONSCIOUS.
- 3. UNATTENDED USE OF HEATED INSOLES ON ANIMALS. CHILDREN OR INCAPACITATED PERSONS MAY BE DANGEROUS.
- 4. DUE TO THE NATURE OF BATTERY HEATED PRODUCTS, THEY MAY CAUSE BURNS OR DISCOMFORT, CONSULT A PHYSICIAN PRIOR TO USE ON SENSITIVE SKIN OR IF YOU MAY HAVE A MEDICAL CONDITION AFFECTING CIRCULATION OR SKIN SENSITIVITY.
- 5. FREQUENTLY CHECK SKIN UNDER HEATED AREAS TO AVOID BURNING. UNDERSTAND YOUR INDIVIDUAL EARLY WARNING SIGNS OR SENSATIONS OF A BURN AND REMOVE HEATED INSOLES BEFORE ANY BURNS OCCUR. IN THE RAR EVENT OF EXPERIENCING ANY SENSATION OF OVERHEATINI OR DISCOMFORT WHILE USING HEATED INSOLES. IMMEDIATELY REMOVE AND TURN OFF.
- 6. DO NOT ATTEMPT TO DISASSEMBLE OR ALTER ANY PART OF HEATED INSOLES OR CHARGING KIT.
- 7. DO NOT STORE HEATED INSOLES OR CHARGING KIT BELOW -4ºF (-20ºC) OR ABOVE 120ºF (49ºC).
- 8. DO NOT ALLOW HEATED INSOLES TO COME INTO CONTACT WITH WATER OR OTHER LIQUIDS. IF WATER OR OTHER LIQUIDS ENTER THE HEATED INSOLES INTERIOR IMMEDIATELY REMOVE AND TURN INSOLES OFF. ALLOW HEATED INSOLES TO DRY COMPLETELY BEFORE ATTEMPTING TO USE AGAIN. CONTINUED USE OF A POTENTIALLY DAMAGED PRODUCT MAY RESULT IN FIRE OR AN ELECTRICAL SHOCK.
- 9. DO NOT EXPOSE HEATED INSOLES OR CHARGING KIT TO DIRECT FLAME OR PLACE NEAR A HEAT SOURCE AS IT MAY CAUSE AN EXPLOSION.
- 10. MAKE SURE TO TURN HEATED INSOLES OFF WHEN NOT BEING USED.

USAGE & STORAGE:

USAGE-

- 1. BE CERTAIN TO USE YOUR ACTIONHEAT™ HEATED INSOLES WITH THE PROVIDED ACTIONHEAT™ CHARGING KIT. FAILURE TO DO SO CAN CAUSE HEATED INSOLES TO OVERHEAT CALISING DAMAGE
- 2. RECOMMENDED POWER SETTING OF 50% IS SUFFICIENT FOR TEMPERATURES AROUND 50º-64ºF WHILE AT LOWER TEMPERATURE SETTING THE POWER TO 75% OR 100% IS SUFFICIENT. IT IS NOT RECOMMENDED TO USE THE 100% POWER SETTING FOR A LONG TIME AS IT MAY CAUSE OVERHEATING AND/OR BODILY DISCOMFORT.

STORAGE-

IT IS IMPORTANT TO MAINTAIN AT LEAST 25% OF YOUR BATTERY POWER WHEN NOT IN USE. FAILURE TO DO THIS WILL RESULT IN PERFORMANCE PROBLEMS AND REDUCED BATTERY LIFE.

PRODUCT DETAILS:



HOW TO USE:

- 1. TO CHARGE, PLUG DUAL MICRO-USB CABLE INTO MICRO-USB PORT ON BACK OF EACH INSOLE.
- 2. CHARGE FOR 4-6 HOURS. LED LIGHT WILL BLINK WHEN CHARGING. INSOLE'S LED LIGHT WILL BE A CONSTANT GREEN LIGHT WHEN FULLY CHARGED.
- 3. TO TURN HEATED INSOLES ON OR OFF PRESS POWER BUTTON ON BACK OF INSOLES, OR POWER BUTTON ON REMOTE CONTROL FOR 3 SECONDS.
- 4. USE REMOTE CONTROL TO SET DESIRED HEAT LEVEL. OR PRESS THE POWER BUTTON ON THE BACK OF EACH INSOLE 1-3 TIMES.
- 5. THE LED LIGHT ON BACK OF INSOLE INDICATES THE CURRENT HEATING LEVEL. RED(HIGH): BLUE(MEDIUM). GREEN(LOW).
- 6. TO CHECK THE REMAINING BATTERY LEVEL OF THE INSOLES PRESS THE POWER BUTTON ON BACK OF INSOLES QUICKLY 2 TIMES. IF THE LED FLASHES: RED(D-33%); BLUE(34-66%); GREEN(67-100%).



HEATS UP TO 130ºF





- 7. TRIM INSOLES TO FIT IF NECESSARY. MAKE SURE NOT TO TRIM INSOLES TOO SHORT. YOU CAN USE YOUR EXISTING SHOE'S SOLES AS A TEMPLATE. DO NOT CUT THE INNERMOST TRIM LINE, TO AVOID DAMAGE OF THE INTERNAL HEATING SYSTEM.
- 8. REPLACE YOUR SHOE'S EXISTING INSOLE WITH YOUR ACTIONHEAT™ HEATED INSOLES.
- 9. TO DEACTIVATE INSOLES USE THE "I" BUTTON ON THE REMOTE CONTROL. THE INSOLES ARE NOW ON STAND-BY MODE. TO TURN OFF THE INSOLES COMPLETELY, PRESS THE POWER BUTTON ON THE REMOTE OR ON THE BACK OF THE INSOLES FOR 3 SECONDS.

IF HEATED INSOLES DO NOT RESPOND TO REMOTE CONTROLLER

- 1. PRESS THE POWER BUTTON ON THE INSOLES FOR 4 SECONDS UNTIL THE LED LIGHTS START FLASHING.
- 2. PRESS THE "I" BUTTON ON THE REMOTE CONTROL TO PROGRAM THE REMOTE TO THE INSOLES.

CARE:

- BEFORE CLEANING. BE SURE HEATED INSOLES ARE TURNED OFF.
- 2. SPOT CLEAN ONLY, DO NOT PUT IN WASHING MACHINE. DO NOT SCRUB WHILE CLEANING.
- 3. LAY FLAT OR HANG TO DRY. DO NOT PUT IN DRYER. IRON OR DRY CLEAN.

ACTIONHEAT™ PRODUCT WARRANTY:

ELECTRICAL COMPONENTS OF THE GARMENT-WHEN YOU PURCHASE AN ACTIONHEAT™ HEATED GARMENT FROM AN AUTHORIZED ACTIONHEAT™ RETAILER WITHIN THE UNITED STATES THE ELECTRICAL COMPONENTS OF THE GARMENT ARE WARRANTIED TO BE FREE FROM FACTORY DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF (90) NINETY DAYS.

GARMENT MATERIALS & CONSTRUCTION-

ALL NON-ELECTRICAL COMPONENTS OF THE GARMENT ARE WARRANTED TO BE FREE FROM FACTORY DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF (90) NINETY DAYS FROM THE DATE OF THE INITIAL PURCHASE. IF THERE IS ANYTHING WRONG WITH THE SEWING OR MATERIALS OF AN ACTIONHEAT™ PRODUCT THAT WAS CAUSED BY MANUFACTURER'S DEFECT THE PRODUCT WILL BE REPAIRED OR REPLACED AT THE DISCRETION ACTIONHEATM AT NO CHARGE.
*SHIPPING AND HANDLING FEES ARE THE RESPONSIBILITY OR THE PURCHASER.

BATTERY & CHARGER-

ACTIONHEAT™ POWER BANKS & BATTERY POWER PACKS ARE UNDER WARRANTY FROM FACTORY DEFECTS FOR (90) NINETY DAYS FROM THE INITIAL PURCHASE DATE. ACTIONHEAT™ WILL REPAIR OR REPLACE ANY POWER PACK FOUND TO BE DEFECTIVE UNDER NORMAL USE WITHIN THE (90) NINETY DAY WARRANTY PERIOD.

WARRANTY EXCLUSIONS-

- ANY DAMAGE CAUSED TO ANY ACTIONHEAT™ ITEM BY MISUSE, ABUSE, IMPROPER CARE, ACCIDENT, NORMAL WEAR AND TEAR, OR THE NATURAL BREAKDOWN OF MATERIALS OVER AN EXTENDED PERIOD OF TIME AND USE ARE NOT COVERED IN THIS WARRANTY.
- ANY ALTERATIONS OR REPAIRS (ATTEMPTED OR OTHERWISE) PERFORMED ON ANY ACTIONHEATM ITEM VOIDS ANY AND ALL WARRANTIES OFFERED BY ACTIONHEATM FOR THAT PARTICULAR ITEM.
 *WARRANTY APPLIES ONLY TO ORIGINAL PURCHASER AND ONLY FOR THE ORIGINAL PURCHASER PURCHA PRODUCTS PURCHASED DIRECTLY FROM AN AUTHORIZED ACTIONHEAT™ DEALER.

WWW.ACTIONHEAT.COM



INSTRUCTION MANUAL:

3.7 VOLT RECHARGEABLE HEATED INSOLES

WARNING & SAFETY PRECAUTIONS!

BEFORE USING ANY ACTIONHEAT™ PRODUCT PLEASE READ & ADHERE TO ALL ENCLOSED INSTRUCTIONS, WARNINGS & CARE INFORMATION TO REDUCE RISK OF INJURY OR MISUSE. DUE TO THE NATURE OF BATTERY HEATED PRODUCTS, THEY MAY CAUSE SERIOUS BURNS OR DISCOMFORT. **USE CAREFULLY!**